



RUSH MH 2

Service note.

Keyboard and DMX do not work.

We have seen several cases where the screws for the bracket or unoriginal screws have been mounted without the washer and bracket on the MH 2.

Without the washer and bracket the screws can touch the display PCB and cause a shortcut leading to missing DMX control and no function of the buttons on the MH 2.


The MH 2 will not stand on the rubber feet that is mounted on the bottom of the fixture, so using the fixture can cause it to move over the surface it stands on.

How to avoid this and repair the fixture.

Only use the original screws and do not mount them without the washer and bracket.

1. Remove the screws
2. Open the fixture and swap the defect PCB with a new one (part nr: 50480571)
3. Go into the menu and do a reset
4. Then the MH 2 is ready

Please see next page.

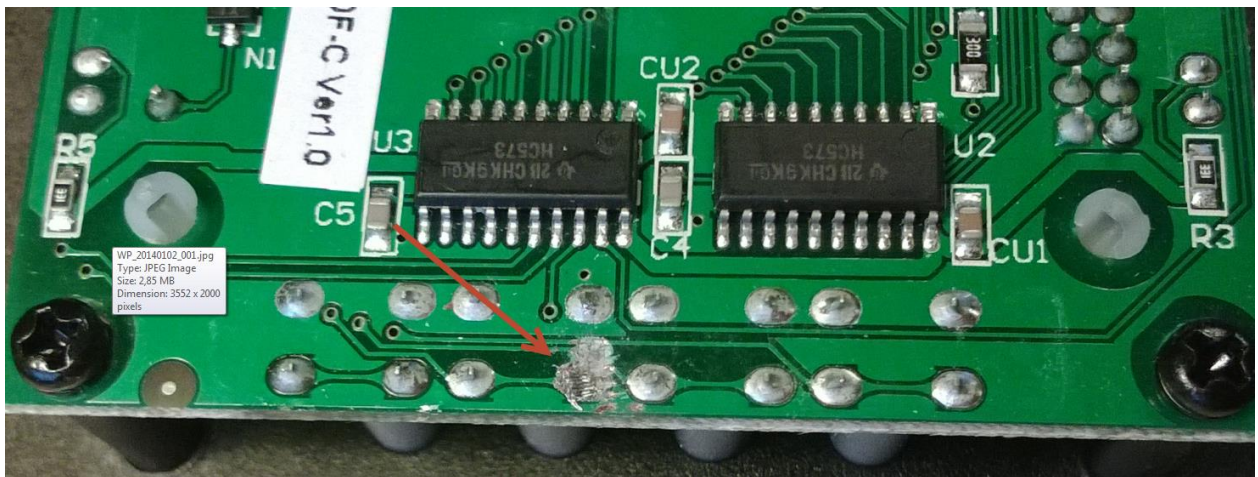



www.martin.com • Olof Palmes Allé 18 • DK-8200 Aarhus N • Denmark
Tel. (+45) 8740 0000 • Fax (+45) 8740 0010