


Remove the battery tab before using the remote

Before you use the remote control, you must open it and remove the battery insulating tab:



1. Remove the two Phillips #0 screws (arrowed) from the remote. It is not necessary to remove the key ring.

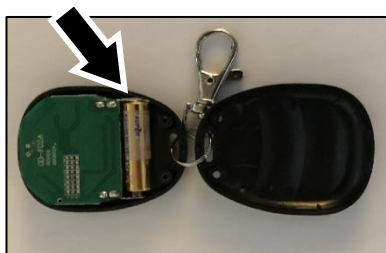

2. Open the remote and remove the white insulating tab (arrowed) from the end of the battery. Check that the battery is installed correctly and makes good contact with the battery terminals.



3. Align the casing and close the remote. Reinstall the two Phillips screws.

Martin
by HARMAN