



Quick Start - Logo Projector




The Logo Projector is a stand-alone projection luminaire. The Logo Projector is described in detail in the *Ego user manual*, but here are some simple tips to get you started quickly.

Installation

1. The device comes with a European plug installed on the power cable. Replace this if it does not fit your local standard. The yellow and green wires should be connected to ground (earth), the brown wire to live, and the blue wire to neutral.
2. Plug the mains lead into the power input on the Logo Projector control panel.
3. The Logo Projector should be mounted at least 0.3 meters (12 in.) from the surface to be illuminated and at least 0.1 meters (4 in.) from any combustible materials. The clearance around the air vents should be at least 0.1 meters (4 in.).

Wall or ceiling installation


1. Hang the Logo Projector from the ceiling, or affix it to a wall, using high grade M12 hardware (a 12 mm, or 1/2 inch, bolt or screw and a bolt or rawl plug). The minimum hardware strength should be 8.8. Consult your hardware supplier for advice if you are unsure about what to use.
2. We recommend that you install a safety cable to prevent the Logo Projector from falling should the mounting hardware fail.
3. Loosen the swivel locks, tilt the fixture to the desired angle, and retighten.
4. Install a safety cable that can hold at least several times the weight of the fixture through the handle of the of the fixture and secure it.

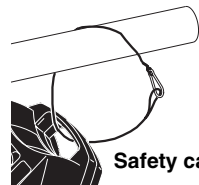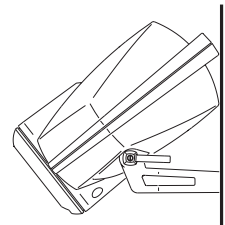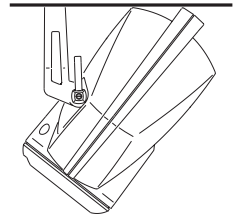


Safety cable

Operation on a flat surface

1. Set the Logo Projector on the floor, or any other horizontal surface, so that the mounting bracket is under the fixture.
2. Adjust the mounting bracket and tighten both swivel locks. Ensure that the clearance around the air vent is not impaired.

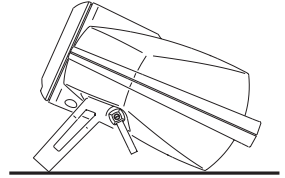


Do not operate the fixture while it lies flat without the mounting bracket extended as this reduces the air flow to the fan; the fixture may overheat and then the thermostatic switch will temporarily cut the power.

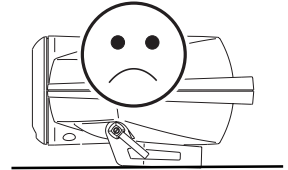


Operation

1. Apply power. The lamp turns on as soon as power is applied. The effect wheel and mirror dish begin to rotate.
2. The first time you use the Logo Projector after installing it, adjust the focus using the thumb screw next to the lens.
3. Set the **Idle Speed** dial on the control panel so that it is *inside* the blue Auto Trig zone. The TRIG LED will light-up blue.

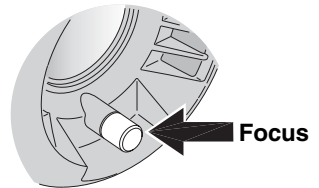

Note that if you set the dial *outside* of the Auto Trig zone the Logo Projector will change images in time with any music that is being played, or, if no music is present, at a fixed interval that relates to how far clockwise the Idle Speed dial is wound.

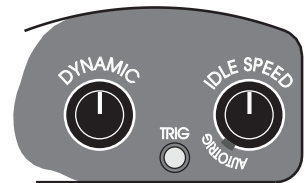

4. The **Dynamic** dial on the control panel is used to set the speed of image changes and of the overall effect. When the dial is wound fully anti-clockwise the fixture will react relatively slowly, and the level of speed/aggressiveness will increase the further clockwise that the dial is wound.

Refer to the *Ego user manual* (P/N 35000109) for additional information about using and maintaining your Logo Projector.