


P/N 35011503 Instruction, Jet cleaning ZR24/7 & Magnum Hazer

The ZR24/7 & Magnum Hazers have now been fitted with a Brass elbow/connector that allows total cleaning of the internal 0.5mm orifice. This is on units from serial number 6022901001 and onwards.

To clean the components of any contaminants which may restrict the output, please follow the cleaning instructions laid out below.

- ✍ Remove the brass elbow from the 1/8th copper pipe (A) and the block input (B). (Picture 1)
- ✍ This will leave the 1/8th elbow, the screw on straight and internal straight, which will be left as one assembled component. (Picture 2)

Picture 1

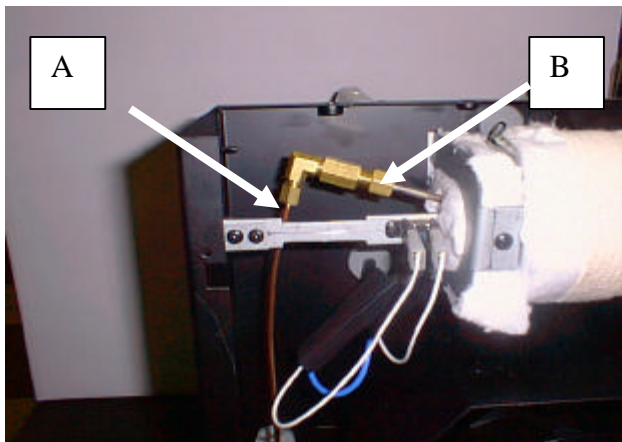


Picture 2



- ✍ Undo the two components and pull apart (Picture 3)
- ✍ Clean the 0.5mm orifice using <0.5mm wire.
- ✍ Once happy the components are clean, re-assemble and connect to the unit.
- ✍ Prime the unit as per the instruction manual. The unit will now be fully operational.
- ✍ Picture 4, is the complete broken down valve.

Picture 3

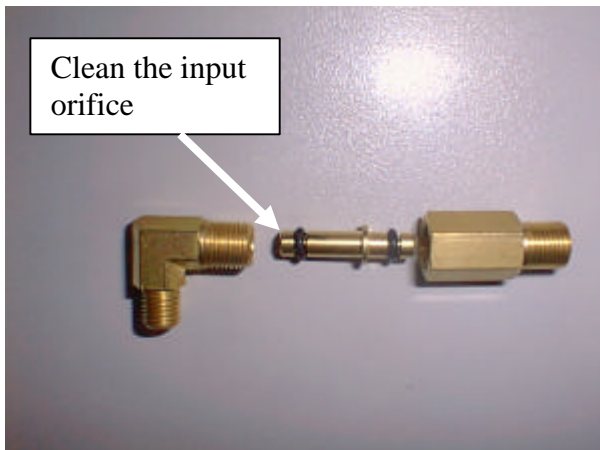

Picture 4

